

Opel V39.90Diagnostics List

Module	Systems	Year		Sys. Info	Read-Clear code	Data stream	Actuation	Special functions	Others
		Start	End						
Astra-J (2009-2011)									
Engine	Engine Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	4.1 Clutch Pedal Position Learn 4.2 HO2S Learn 4.3 Engine Oil Life Reset	
Transmission	Transmission Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Chassis	Electronic Brake Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	5.1 Clear Deployment Record 5.2 Yaw Rate Sensor Learn 5.3 Steering Wheel Angle Sensor	
	Fuel Pump Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1. Fuel Trim Reset	
	Parking Brake Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1. Park Brake Calibration	
	Electric Power Steering Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		1. Power Steering Softstops Reset 2. Power Steering Softstops Learn 3. Steering Wheel Angle Sensor	
Body	Front Seat Heating Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Body Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	5.1 Brake Pedal Position Sensor Learn 5.2 Clear Drive Window Learn Values	
	Inflatable Restraint Sensing&Diag. Modu	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Instrument Cluster	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	5.1 CAN Bus Configuration Learn	

Body	Keyless Entry Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Remote Heater and Air Conditioning Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	5.1 HVAC Actuators Learn	
	Steering Column Lock Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		5.1 CAN Bus Configuration Learn	
	Trailer Interface Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1 CAN Bus Configuration Learn	
Insignia (2009-2011)									
Engine	Engine Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	5.1 APP Learn 5.2 DPF Pressure Learn 5.3 Exhaust Gas Temperature Sensor Learn	
Transmission	Transmission Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Chassis	Electronic Brake Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		5.1 Clear Deployment Record 5.2 Yaw Rate Sensor Learn	
	Electric Power Steering Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		1. Power Steering Softstops Reset 2. Power Steering Softstops Learn 3. Steering Wheel Angle Sensor	
	Front Seat Heating Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Body Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	5.1 Brake Pedal Position Sensor Learn 5.2 Clear Drive Window Learn Values	
	Inflatable Restraint Sensing&Diag. Modu	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		

Body	Instrument Cluster	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	5.1 CAN Bus Configuration Learn	
	Keyless Entry Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Remote Heater and Air Conditioning Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	5.1 HVAC Actuators Learn	
	Steering Column Lock Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		5.1 CAN Bus Configuration Learn	
	Trailer Interface Control Module	2009	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1 CAN Bus Configuration Learn	
Meriva-B (2012)									
Engine	A 13 DTC	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	A 13 DTE	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Engine Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	A 14 NEL	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	A 14 NET	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	A 14 XER	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
Transmission	Transmission Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Learn Selector Lever N Position 2.Learned Values Reset	
Chassis	Electronic Brake Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Electric Power Steering Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Parking Brake Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Park Brake Calibration 2.Park Brake Cable Replacement Proc.	

	Fuel Injector Control Module	2011	2012	<i>info</i>		<i>data</i>	<i>actuat.</i>		
	Steering Wheel Angle Sensor Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Steering Wheel Angle Sensor Reset	
Body	Instrument	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.CAN Bus Configuration Learn	
	Front Seat Heating Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Headlamp Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Headlamps Sensors Learn	
	Inflatable Restraint Sensing&Diag. Modu	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Parking Assist Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.CAN Bus Configuration Learn	
	Remote Heater & A/C Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Park Brake Cable Replacement Proc. 2.CAN Bus Configuration Learn	
	Trailer Interface Control Module	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.CAN Bus Configuration Learn	
Corsa-D									
	Z10XEP	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control 3.Programming	
	Z12XEP	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control 3.Programming	
	Z14XEP	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control 3.Programming	
	Z17DTR	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Z13DTH	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	

Engine	Z13DTJ	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Z16LEL	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Z16LER	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	A10XEP	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset 2.HO2S Heater Learn 3.Idle Learn 4.Engine Oil Life Reset	
	A12XER	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset 2.HO2S Heater Learn 3.Idle Learn 4.Engine Oil Life Reset	
	A12XEL	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset 2.HO2S Heater Learn 3.Idle Learn 4.Engine Oil Life Reset	
	A14XER	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset 2.HO2S Heater Learn 3.Idle Learn 4.Engine Oil Life Reset	
	A14XEL	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset 2.HO2S Heater Learn 3.Idle Learn 4.Engine Oil Life Reset	
	A16LEL	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	A16LER	2010	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Engine (Default)	2007	2012			<i>data</i>			
	AF-13-4	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	

Transmission	MTA2	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.Programming	
	MTA	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
Chassis	ABS	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Fuel Injector Control Module	2011	2012	<i>info</i>		<i>data</i>	<i>actuat.</i>		
	EPS	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
Body	EHS	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	AFL	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Immobiliser	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Central Door Lock	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Anti Theft Waring System	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Heating,Ventilating and Air Cond	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Wipers/Washer	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Interior Lighting	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Exterior Lighting	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	IPC	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Add.Fun. 3.Programming	
	PAS	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add.Fun. 2.Programming	

	SDM	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	BCM	2009	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	TIM	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
Vauxhall VXR8 (2007-2012)									
Engine	V8 GEN IV	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset	
Transmission	AT	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Chassis	Fuel pump control module	2011	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel pump trim reset	1. Fuel pump 2. Fuel pressure control
	EBCM	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Brake Bleed	
	ESC	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Body	AHL	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Basic Position Calibration	
	BCM	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Brake Pedal Position Sensor Learn 2.Progrom SDM Primary Key to BCM	
	HVAC	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		1.Air Mix Door 2.Blower Speed 3.Front Outlet Mode 4.Outside Temperature

	Immobiliser	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	MSM	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Park Assist	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		1.Vehicle Speed Control
	IPC (Instrument Panel Cluster)	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	RFA (Multipurpose Receiver Module)	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	SDM	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			1.Program SDM Primary Key to BCM
Vauxhall Monaro (2005-2006)									
Engine	V8 GEN IV	2005	2006	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset	
Antara,Captiva (Short Body)									
Engine	2.0 L (Diesel)	2007	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
Transmission	AT	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Reset Learned Values	1.Line Pressure Solenoid Test 2.TCC Solenoid Test 3.Shift Pressure Solenoid
	TCCM	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Clutch Calibration Value	
Chassis	Fuel pump control module	2011	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel pump trim reset	1. Fuel pump 2. Fuel pressure control

Chassis	ABS	2007	2011	info	err. Code	data	actuat.	1.Program Vehicle Identification No. 2.Steering Angle Sensor Calibration 3.Program High Speed CAN-Bus Config.	
Body	AHL	2007	2010	info	err. Code	data	actuat.	1.Calibration.	
	ATWS	2007	2010	info	err. Code	data	actuat.		
	BCM	2007	2011	info	err. Code	data	actuat.		
	HVAC	2007	2010	info	err. Code	data			
	Interior Lighting	2007	2010	info	err. Code	data			
	Exterior Lighting/Turn Indicator System	2007	2010	info	err. Code	data			
	SDM (Airbag)	2007	2010	info	err. Code	data		1.Program SDM Primary Key to BCM	
	ECC	2007	2011	info	err. Code		actuat.	1.Program Vehicle Identification No. 2.Steering Angle Sensor Calibration 3.Program High Speed CAN-Bus Config.	1.Blower Fan Test
	Immobiliser	2007	2011	info	err. Code	data			
	IPC	2007	2011	info	err. Code	data	actuat.	1.Program Odometer	
	PAS	2007	2011	info	err. Code	data	actuat.	1.Vehicle Speed Control	
	Central Door Lock	2007	2010	info	err. Code	data	actuat.		
	RFA	2007	2011	info	err. Code	data		1.TPM Learn Mode 2.Tyre Type/Pressure Selection	
SLM	2007	2010	info	err. Code	data				
XBCM	2007	2011	info	err. Code	data	actuat.			
Captiva(Long Body)									

Engine	2.0 L (Diesel)	2007	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z 32 SE	2007	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Transmission	AT	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Reset Learned Values	1.Line Pressure Solenoid Test 2.TCC Solenoid Test 3.Shift Pressure Solenoid Test 4.Gear control
	TCCM	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Clutch Calibration Value	
Chassis	Fuel pump control module	2011	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel pump trim reset	1. Fuel pump
	ABS	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Vehicle Identification No. 2.Steering Angle Sensor Calibration 3.Program High Speed CAN-Bus Config.	
	BCM	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	ECC	2007	2011	<i>info</i>	<i>err. Code</i>		<i>actuat.</i>	1.Program Vehicle Identification No. 2.Steering Angle Sensor Calibration 3.Program High Speed CAN-Bus Config.	1.Blower Fan Test

Body	Immobiliser	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	IPC	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	PAS	2011	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Vehicle Speed Control	
	RFA	2007	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.TPM Learn Mode 2.Tyre Type/Pressure Selection	
	XBCM	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Agila-B									
Engine	K10B	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset	
	K12B	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Fuel Trim Reset	
Chassis	ABS/ESP	2008	2011	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Steering Angle Sensor Calibration	
	EPS	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	BCM	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	SDM (Airbag)	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	2008	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Agila (2000-2007)									
Engine	Z10XE	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Z10XEP	2004	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Z12XE	2000	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Z12XEP	2005	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	

	Z13DT	2004	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
Chassis	ABS	2000	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	
	Electronic Power Steering	2000	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	Airbag	2000	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	2000	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Instrument	2000	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Infotainment System	Radio CAR 2003	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CDR 2005	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Trip Info Display TID	2000	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Tigra (1997-2000)									
Engine	X14XE	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X16XE	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Transmission	AF 13/14/20	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	Airbag	2000	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
	Airbag SAB6	1999	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Airbag-S	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Anti Theft Warning	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			

	Immobiliser	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Chassis	ABS-5.3	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Infotainment System	Radio 300	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 400	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 500	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 700	1999	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Tirgra-B (2005-2009)									
Engine	Z13DT	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z14XEP	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z18XE	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
Transmission	Easytronic(MTA)	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
Body	Airbag	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Body Control Module	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Electrohydraulic Hardtop	2007	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Instrument	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
Chassis	ABS8/ESP8	2006	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Electronic Power Steering	2005	2009	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Corsa-B (1997-2003)									

Engine	C14NZ	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	C14SE	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	X10XE	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
	X12XE	1998	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
	X14NE	1998	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	X14NE	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	X14SZ	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	X14XE	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X16XE	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	X16XE	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Transmission	AF 13/14/20	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	AF 13II/20/22/30	1998	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	Airbag	2000	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Airbag SAB6	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Airbag-S	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Anti Theft Warning	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Immobiliser	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	

	Instrument	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
Chassis	ABS-5.3	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Electronic Power Steering	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
Infotainment System	Multi Info Display MID	2002	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 300	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 400	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 500	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 600	2002	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 700	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio NCDR 1100/1500	2000	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CCR 600	2000	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Corsa-C (2001-2011)									
Engine	Y13DT	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Y17DT	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Y17DTL	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z16YNG	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Z10XE	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.Programming	
	Z10XEP	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control 3.Programming	

	Z12XE	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z12XEP	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z13DT	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Z14XE	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z14XEP	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Z16SE	2003	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z17DTH	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Z18XE	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
Transmission	AF 13-II/17/20/22	2003	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	AF 13-II/17/20/22 CAN	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Esaytronic(MTA)	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
Body	Add On Heater	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Airbag	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Body Control Module	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Electronic Climate Control	2002	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	HeadLamp Levelling Device	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Add On Heater	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Instrument	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
Chassis	ABS5.3/5.4 (+TC)	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	ABS8/ESP8	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.Programming	
	Electronic Power Steering	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Astra-F (1997-2002)									
Engine	16LZ2	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	16NZR	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	C14NZ	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	C14SE	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	C16SE	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			

	C18SEL	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X14XE	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X16SZR	1997	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X16XEL	1997	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X18XE	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	
	X20XEV	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
Transmission	AF 13/14/20	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	AF 13II/20/22/30	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
Body	Airbag	2000	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Airbag-S	1997	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
	Anti Theft Warning	1997	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
	Immobiliser	1997	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
Infotainment System	Multi Info Display MID	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CAR 300	1997	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
	Radio CAR 400	1997	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
	Radio CDR 500	1997	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
	Trip Info Display TID	1999	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Astra-G (1998-2011)									
	C16SEL	2006	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	X12XE	1999	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X14XE	1999	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X16SZR	1998	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X16XEL	1998	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
	X17DTL	1998	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	X18XE1	1998	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	

Engine	X20DTL	1998	2000	info	err. Code	data	actuat.		
	X20XER	1998	2000	info	err. Code	data	actuat.	1.Add. Fun.	
	Y17DT	2000	2011	info	err. Code	data	actuat.	1.Programming	
	Y17DTL	2000	2003	info	err. Code	data	actuat.	1.Programming	
	Y20DTH	2000	2011	info	err. Code	data	actuat.	1.Programming	
	Y20DTL	2000	2001	info	err. Code	data	actuat.	1.Programming	
	Y22DTR	2002	2011	info	err. Code	data	actuat.	1.Add. Fun. 2.ECU Control	
	Z12XE	2001	2011	info	err. Code	data	actuat.	1.Programming	
	Z14XE	2001	2011	info	err. Code	data	actuat.	1.Programming	
	Z14XEP	2005	2011	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Z16SE	2001	2011	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Z16XE	2001	2011	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Z16XEP	2003	2011	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Z16YNG	2006	2011	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Z17DTL	2007	2011	info	err. Code	data	actuat.		
	Z18XE	2001	2011	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
Z18XEL	2001	2011	info	err. Code			1.ECU Control 2.Programming		

	Z20LET	2001	2011	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Z22SE	2000	2011	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
Transmission	AF 13-II/17/20/22	1998	2011	info	err. Code	data			
	AF 13-II/17/20/22 CAN	2001	2011	info	err. Code	data	actuat.		
Body	Add On Heater	2000	2011	info	err. Code	data			
	Airbag	2000	2011	info	err. Code	data			
	Airbag SAB6	1998	2000	info	err. Code	data			
	Anti Theft Warning	1998	2011	info	err. Code	data		1.Programming	
	Central Door Lock	1998	2003	info	err. Code	data			
	Electronic Climate Control	2006	2011	info	err. Code	data			
	Engine Cooling Module	2006	2011	info	err. Code	data			
	Head Light Range Adjustment	2006	2011	info	err. Code	data			
	HeadLamp Levelling Device	2002	2011	info	err. Code	data			
	Immobiliser	1998	2011	info	err. Code	data			
	Instrument	1998	2011	info	err. Code	data		1.Add. Fun.	
Softtop Controer	2002	2011	info	err. Code	data				
Chassis	ABS-5.3/5.4 (+TC)	1998	2011	info	err. Code	data			
	Electronic Power Steering	2000	2011	info	err. Code	data			
	ESP	2000	2011	info	err. Code	data			
Infotainment System	Multi Info Display MID	1998	2003	info	err. Code	data			
	Radio 300	1998	2003	info	err. Code	data			
	Radio 400	1998	2003	info	err. Code	data			
	Radio 500	1998	2003	info	err. Code	data			
	Radio 700	1999	2004	info	err. Code	data			
	Radio CAR 300	2000	2000	info	err. Code	data			
	Trip Info Display TID	1999	2007	info	err. Code	data			
Astra-H (2004-2012)									

	Z 18 XE	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Reser ECU 5.Program Idle Speed 	<ul style="list-style-type: none"> 1.Electronic Throttle Control 2.Injector Cutoff Test
	Z 19 DT	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Replace Mass Air Flow Sensor 5.Replace Rail Pressure Sensor 6.Replace O2 Sensor 	
	Z 13 DTH	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Reser ECU 5.Replace Injector 6.Fuel Consumption Correction 	<ul style="list-style-type: none"> 1.Injector Cutoff Test

	Z 19 DTH	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Replace Mass Air Flow Sensor 5.Replace Rail Pressure Sensor 6.Replace O2 Sensor	
	Z 16 XEP	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU 7.Reset Learned Values	1.Electronic Throttle Control 2.Injector Cutoff Test
	Z 12 XEP	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control

	Y 13 DTH	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Reser ECU 5.Replace Injector 6.Fuel Consumption Correction	1.Injector Cutoff Test
	Z 14 XEP	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control
	Z 14 XEL	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control

	Z 17DTJ	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program VIN 5.Replace Fuel Pump 6.Replace Mass Air Flow Sensor 7.Replace Rail Pressure Sensor 8.Program Idle Speed	1.Injector Cutoff Test
	Z 17DTR	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program VIN 5.Replace Fuel Pump 6.Replace Mass Air Flow Sensor 7.Replace Rail Pressure Sensor 8.Program Idle Speed	1.Injector Cutoff Test

Engine	Z 16 LET	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control
	Z 16 XE1	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map	1.Electronic Throttle Control 2.Injector Cutoff Test
	Z 17 DTL	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Replace Injector 5.Replace Rail Pressure Sensor 6 .Program Idle Speed 7.Fuel Consumption Correction 8.Reser ECU	

	Z 18 XER	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Reset Learned Values 5.Reser ECU 6.Program Idle Speed	1.Electronic Throttle Control 2.Injector Cutoff Test
	Z 22 YH	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Reser ECU 5.Program Idle Speed	1.Swirl Level Control Actuator 2.Injector Cutoff Test
	Z 17 DTH	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Replace Injector 5.Replace Rail Pressure Sensor 6 .Program Idle Speed 7.Fuel Consumption Correction 8.Reser ECU	

	Z 16 XER	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Reset Learned Values 5.Reser ECU 6.Program Idle Speed	1.Electronic Throttle Control 2.Injector Cutoff Test
	Z 20 LEL	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control
	Z 20 LER	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control

	Z 20 LEH	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control
	A 16 LET	2009	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control
	A 16 XER	2011	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Reset Learned Values 5.Reser ECU 6.Program Idle Speed	1.Electronic Throttle Control 2.Injector Cutoff Test

	A 17 DTJ	2009	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program VIN 5.Replace Fuel Pump 6.Replace Mass Air Flow Sensor 7.Replace Rail Pressure Sensor 	1.Injector Cutoff Test
	A 17 DTR	2009	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program VIN 5.Replace Fuel Pump 6.Replace Mass Air Flow Sensor 7.Replace Rail Pressure Sensor 	1.Injector Cutoff Test
	Engine (Default)	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	AF 40-6	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> 1.Reser ECU 2.Program High Speed CAN-Bus Configuration 3.Reset Learned Values 4.Learned Selector Lever N Position 	

Transmission	AF17-4	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Reser ECU 2.Program High Speed CAN-Bus Configuration 3.Reset Learned Values	1.Pressure Regulator Sol.Valve Test 2.TCC Solenoid Valve Test
	AF22-4	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Reser ECU 2.Program High Speed CAN-Bus Configuration 3.Reset Learned Values	1.Pressure Regulator Sol.Valve Test
	MTA(Easytronic)	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration 2.Bleed Clutch Hydraulic 3.Learn Gearbox Parameters 4.Touch Point Adaption	
	MTA(Easytronic Magneti Marelli)	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Bleed Clutch Hydraulic	

	CIM (Steering Column Module)	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Key Program 2.Program High Speed CAN-Bus Configuration 3.Program Mid Speed CAN-Bus Configuration 4.Program Low Speed CAN-Bus Configuration 5.Program Vehicle Identification No. 6.Reset CIM Module 7.Program Immobiliser Function 8.Steering Angle Sensor Calibration	1.Display Immobiliser Status
	ATWS	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	IPC ECU	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Immobiliser	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			

Body	Instrument	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Instantaneous Tank Content Control 2.Engine Speed Control 3.Vehicle Speed Control
	Wipers/Washer	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	Central Door Lock	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	Interior Lighting	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Instrument Dimming Test 2.LED Dimmed Illumination Test 3.LCD Display Dimmed Illumination Test
	Exterior Lighting/Turn Indicator System	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	

AHL/AFL(Headlamp Levelling)	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration 2.Basic Position Calibration 3.Program Code Index	
SDM	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration 2.Program Seat Belt Reminder	
SLM	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
REC	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Reser ECU	1.Display Immobiliser Status
PEPS	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No.	1.Display Immobiliser Status
PAS	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration	
Electrohydraulic Hardtop	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Program Variant Configuration	

	EHS	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Reser ECU	
	ECC/SAC	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Calibrate Step Motors	1.Blower Fan Test 2.Blending Flap Motor Test 3.Distrbution Flap Motor Test
	CDC	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	UEC	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Reser ECU	1.Display Immobiliser Status
	EHPS (Electrohydraulic Power Steering)	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	ABS/TC/ESP(Vehicle Dynamic System)	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration 2.Program Vehicle Identification No.	
	TPMS(Tyre Pressure Monitoring System)	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Learn DDS(Deflation Detect.System)	
	TPMS ECU(Tyre Pressure Monitoring)	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Learn DDS(Deflation Detect.System)	

Chassis	EHPS (Electrohydraulic Power Steering)	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Program High Speed CAN-Bus Configuration	
	CDC(Contimuous Damping Control)	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration	
	ABS/TC/ESP ECU	2004	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Sensor Cluster Calibration	

Vectra-B (1997-2001)

Engine	16LZ2	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	C20SEL	1997	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
	C22SEL	1998	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X16SZR	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X16XEL	1997	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
	X18XE	1997	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X18XE1	1998	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	X20DTH	1998	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X20DTL	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	X20XEV	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
	X25XE	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Y16XE	2000	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Y20DTH	2001	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	
	Y22DTR	2001	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Y26SE	2001	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Z16XE	2001	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Z18XE	2001	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming		

	Z18XE1	2001	2001	info	err. Code	data	actuat.	1.ECU Control	
	Z18XEL	2001	2001	info	err. Code				
	Z22SE	2001	2001	info	err. Code	data	actuat.		
Transmission	AF 13-II/17/20/22	1998	2001	info	err. Code	data			
	AF 13II/20/22/30	1997	1999	info	err. Code	data			
	AF 13-II/17/20/22 CAN	2000	2000	info	err. Code	data			
Body	Airbag	1997	2001	info	err. Code	data			
	Airbag SAB6	1997	2001	info	err. Code	data		1.Programming	
	Anti Theft Warning	1997	2001	info	err. Code	data			
	Central Door Lock	1997	2001	info	err. Code	data	actuat.	1.Programming	
	Electronic Climate Control	1997	2001	info	err. Code	data	actuat.	1.Programming	
	HeadLamp Adjustment (Left)	2000	2001	info	err. Code	data		1.Programming	
	Headlamp Adjustment (Right)	2000	2001	info	err. Code	data		1.Programming	
	Immobiliser	1997	2001	info	err. Code	data		1.Programming	
	Add On Heater	1997	2001	info	err. Code	data			
Instrument	1997	2001	info	err. Code	data		1.Programming		
Chassis	ABS 415	1997	1997	info	err. Code	data			
	ABS-430	1998	2001	info	err. Code	data			
	ABS-5.3/5.4 (+TC)	1998	2001	info	err. Code	data			
	ABS-5-TC	1997	1999	info	err. Code	data			
Infotainment System	Trip Info Display TID	1997	2001	info	err. Code	data			
	Radio 300	1997	2001	info	err. Code	data			
	Radio 400	1997	2001	info	err. Code	data			
	Radio 500	1997	2001	info	err. Code	data			
	Radio 700	1998	2001	info	err. Code	data			
	Trip Info Display TID	1997	2001	info	err. Code	data			
Vectra-C/Signum (2002-2008)									
	Engine Cooling	2006	2008	info	err. Code	data			
	Z22SE	2002	2008	info	err. Code	data	actuat.	1.Programming	
	Z28NEH	2006	2008	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Z28NEL	2006	2008	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Z28NET	2006	2008	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Y 20 DTH	2006	2008	info	err. Code	data	actuat.	1.Programming	

Engine	Y 20 DTR	2003	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z 22 YH	2003	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Z 18 XE	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Z 16 XE	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Y 30 DT	2003	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Z 30 DT	2006	2006	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Z 20 NET	2003	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z 19 DTH	2004	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z 19 DT	2004	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z 16 XEP	2006	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z 32 SE	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Z 18 XER	2006	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Engine (Default)	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Transmission	AF 23-5/33-5/40-6	2005	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	MTA(Easytronic)	2006	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	CVTronic	2004	2008	<i>info</i>	<i>err. Code</i>		<i>actuat.</i>	1.ECU Control 2.Programming	
	AF 23-5/33-5	2002	2004	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	CIM (Steering Column Module)	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	UEC	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	SLM	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	PAS	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.Programming	
	EHS	2006	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.Programming	
	Heating,Ventilation and Air Cond.	2004	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Interior Lighting	2006	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	

Body	SRM(Sun Roof Module)	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	AHL/AFL(Headlamp Levelling)	2006	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Electrical Horn	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	SAC(Automatic Climate Control)	2006	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Instrument	2006	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	SDM	2003	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Add. Fun. 2.Programming	
	BCM	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	DDM	2002	2008	<i>info</i>		<i>data</i>			
	PDM	2002	2007	<i>info</i>		<i>data</i>			
	ATWS	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	CDL	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	ESM	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	REC	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Add. Fun. 2.Programming	
Chassis	ABS/TC/ESP	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	TPMS(Tyre Pressure Monitoring System)	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Electronic Cruise Control	2002	2008	<i>info</i>	<i>err. Code</i>				
	CDC	2004	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.Programming	

	EHPS (Electrohydraulic Power Steering)	2002	2008	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Zafira (1999-2005)									
Engine	X16XEL	1999	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	X18XE1	1999	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	X20DTL	2000	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Y20DTH	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Y22DTR	2002	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Z 16 YNG	2004	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Z16SE	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Z16XE	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z16XEP	2006	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Z18XE	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Z18XEL	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Z20LET	2002	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
Z22SE	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming		
Transmission	AF 13-II/17/20/22	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	AF 13-II/17/20/22 CAN	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Body	Airbag	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Airbag SAB6	1999	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Anti Theft Warning	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Central Door Lock	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Electronic Climate Control	2003	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Engine Cooling Module	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	HeadLamp Adjustment (Left)	2003	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	

	Headlamp Adjustment (Right)	2003	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Immobiliser	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Instrument	1999	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Add. Fun. 2.Programming	
Chassis	ABS-5.3/5.4 (+TC)	1999	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Electronic Power Steering	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	ESP	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
Infotainment System	Multi Info Display MID	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 300	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 400	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 500	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 700	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Trip Info Display TID	1999	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Zafira-B (2005-2012)									
	Z16XE1	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset Learned Values 6.Reset ECU 7.Reset O2-Loop Block Lean Map	1.Electronic Throttle Control 2.Display Immobiliser Status 3.Engine Oil Status 4.Read Odometer Value 5.Injector Cutoff Test

	Z20LER	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control 2.Display Immobiliser Status 3.Engine Oil Status 4.Read Odometer
	Z16YNG	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset Learned Values 6.Reset ECU 7.Reset O2-Loop Block Lean Map	1.Electronic Throttle Control 2.Display Immobiliser Status 3.Engine Oil Status 4.Read Odometer Value
	Z20LEH	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU	1.Electronic Throttle Control 2.Display Immobiliser Status 3.Engine Oil Status 4.Read Odometer

	Z16XEP	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset Learned Values 6.Reset ECU 7.Reset O2-Loop Block Lean Map 	<ul style="list-style-type: none"> 1.Electronic Throttle Control 2.Display Immobiliser Status 3.Engine Oil Status 4.Read Odometer Value 5.Injector Cutoff Test
	Z 17DTJ	2011	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program VIN 5.Replace Fuel Pump 6.Replace Mass Air Flow Sensor 7.Replace Rail Pressure Sensor 8.Program Idle Speed 	<ul style="list-style-type: none"> 1.Injector Cutoff Test

Engine	Z 16 XER	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset Learned Values 6.Reset ECU	1.Electronic Throttle Control 2.Display Immobiliser Status 3.Engine Oil Status 4.Read Odometer Value 5.Injector Cutoff Test
	Z 18 XE	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Z 18 XER	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset Learned Values 6.Reset ECU	1.Electronic Throttle Control 2.Display Immobiliser Status 3.Engine Oil Status 4.Read Odometer Value 5.Injector Cutoff Test

Z19DT	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Replace Mass Air Flow Sensor 5.Replace Rail Pressure Sensor 6.Relace O2 Sensor	
Z19DTL	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Replace Mass Air Flow Sensor 5.Replace Rail Pressure Sensor 6.Relace O2 Sensor	
Z19DTH	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Replace Mass Air Flow Sensor 5.Replace Rail Pressure Sensor 6.Replace Diesel Particulate Filter	1.Display Immobiliser Status 2.Engine Oil Status 3.Read Odometer Value

	Z22YH	2005	2012	info	err. Code	data	actuat.	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset O2-Loop Block Lean Map 6.Reset ECU 	<ul style="list-style-type: none"> 1.Swirl Level Control Actuator 2.Injector Cutoff Test
	A 16 XER	2011	2012	info	err. Code	data	actuat.	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program Idle Speed 5.Reset Learned Values 6.Reset ECU 	<ul style="list-style-type: none"> 1.Electronic Throttle Control 2.Injector Cutoff Test
	A 17 DTJ	2009	2012	info	err. Code	data	actuat.	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program VIN 5.Replace Fuel Pump 6.Replace Mass Air Flow Sensor 7.Replace Rail Pressure Sensor 8.Program Idle Speed 	<ul style="list-style-type: none"> 1.Display Immobiliser Status 2.Engine Oil Status 3.Read Odometer Value 4.Injector Cutoff Test

	A 17 DTR	2009	2012	info	err. Code	data	actuat.	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Contig 2.Program Variant Configuration 3.Program Tyre Circumference 4.Program VIN 5.Replace Fuel Pump 6.Replace Mass Air Flow Sensor 7.Replace Rail Pressure Sensor 8.Program Idle Speed 	<ul style="list-style-type: none"> 1.Display Immobiliser Status 2.Engine Oil Status 3.Read Odometer Value 4.Injector Cutoff Test
	Engine (Default)	2005	2012	info	err. Code				
Transmission	AF22-4	2005	2012	info	err. Code	data	actuat.	<ul style="list-style-type: none"> 1.Reser ECU 2.Program High Speed CAN-Bus Configuration 3.Reset Learned Values 	<ul style="list-style-type: none"> 1.Pressure Regulator Sol.Valve Test
	MTA(Easytronic)	2007	2012	info	err. Code	data	actuat.	<ul style="list-style-type: none"> 1.Program High Speed CAN-Bus Configuration 2.Bleed Clutch Hydraulic 3.Learn Gearbox Parameters 4.Touch Point Adaption 	
	AF 40-6	2005	2012	info	err. Code	data	actuat.	<ul style="list-style-type: none"> 1.Reser ECU 2.Program High Speed CAN-Bus Configuration 3.Reset Learned Values 4.Learned Selector Lever N Position 	

ECC/SAC	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Calibrate Step Motors	1.Blower Fan Test 2.Blending Flap Motor Test 3.Distrbution Flap Motor Te
IPC ECU	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No.	1.Display Immobiliser Status
Immobiliser	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Instrument	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		1.Instantaneous Tank Content Control 2.Engine Speed Control 3.Vehicle Speed Control
Wipers/Washer	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Central Door Lock	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		

	Interior Lighting	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		1.Instrument Dimming Test 2.LED Dimmed Illumination Test 3.LCD Display Dimmed Illumination Test
	Exterior Lighting/Turn Indicator System	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	AHL/AFL(Headlamp Levelling)	2006	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration 2.Basic Position Calibration	
	REC	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Reset ECU	1.Display Immobiliser Status
	UEC	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Reser ECU	1.Display Immobiliser Status

Body

SLM	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No.	
SDM	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Program High Speed CAN-Bus Configuration 2.Program Seat Belt Reminder	
PEPS	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Program High Speed CAN-Bus Configuration 2.Program Seat Belt Reminder	1.Display Immobiliser Status
PAS	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Program High Speed CAN-Bus Configuration	
EHS	2005	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Program Low Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Reser ECU	

	CIM (Steering Column Module)	2005	2012	info	err. Code	data	actuat.	1.Key Program 2.Program High Speed CAN-Bus Configuration 3.Program Mid Speed CAN-Bus Configuration 4.Program Low Speed CAN-Bus Configuration 5.Program Vehicle Identification No. 6.Reset CIM Module 7.Program Immobiliser Function 8.Steering Angle Sensor Calibration	1.Display Immobiliser Status
Chassis	EHPS (Electrohydraulic Power Steering)	2005	2012	info	err. Code	data		1.Program High Speed CAN-Bus Configuration	
	ABS/TC/ESP	2005	2012	info	err. Code	data	actuat.	1.Program High Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Steering Angle Sensor Calibration 4.Sensor Cluster Calibration	
	TPMS	2005	2012	info	err. Code	data		1.Learn DDS(Deflation Detect.System)	
	TPMS ECU	2005	2012	info	err. Code	data		1.Learn DDS(Deflation Detect.System)	

	CDC	2005	2012	info	err. Code	data	actuat.	1.Program High Speed CAN-Bus Configuration	
	ABS/TC/ESP ECU	2005	2012	info	err. Code	data	actuat.	1.Program High Speed CAN-Bus Configuration 2.Program Vehicle Identification No. 3.Sensor Cluster Calibration	
Omega-B (1997-2003)									
Engine	20SE	1997	1999	info	err. Code	data			
	X20DTH	1998	2000	info	err. Code	data			
	X20XEV	1997	2001	info	err. Code	data	actuat.		
	X25XE	1997	2000	info	err. Code	data	actuat.	1.ECU Control	
	Y22DTH	2001	2003	info	err. Code	data	actuat.		
	Y22XE	2000	2000	info	err. Code	data	actuat.		
	Y25DT	2002	2003	info	err. Code	data			
	Y26SE	2001	2003	info	err. Code	data	actuat.	1.ECU Control	
	Z22XE	2001	2003	info	err. Code	data	actuat.		
Transmission	AR 25/35	1997	2003	info	err. Code	data			
	5L40-E	2002	2003	info	err. Code	data			
Body	Airbag	2000	2003	info	err. Code	data			
	Airbag SAB6	1997	1999	info	err. Code	data		1.Programming	
	Airbag-S	1997	1997	info	err. Code	data		1.Programming	
	Anti Theft Warning	1997	2003	info	err. Code	data		1.ECU Control 2.Programming	
	Central Door Lock	1997	2003	info	err. Code	data	actuat.	1.ECU Control 2.Programming	
	Electronic Climate Control	1997	2003	info	err. Code	data		1.ECU Control 2.Programming	
	Head Light Range Adjustment	1999	2003	info	err. Code	data		1.ECU Control 2.Programming	
	HeadLamp Levelling Device	1999	2002	info	err. Code	data		1.Programming	
	Add On Heater	1998	2003	info	err. Code	data			

	Instrument	1998	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
Chassis	ABS-2SE (TC)	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	ABS-5.3/5.4 (+TC)	1998	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
	ESP	2003	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Servotronic	1998	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
Infotainment System	Multi Info Display MID	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 300	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 400	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 500	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 700	1999	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CAR 2003	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CCR 2006	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CDR 2005	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Trip Info Display TID	1997	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>				
Arena (1998 - 2000)									
Body	Immobiliser	1998	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Calibra (1997-2002)									

Engine	X20XEV	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
Transmission	AF 13II/20/22/30	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	AF 13/14/20	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	Airbag-S	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Anti Theft Warning	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Campo (1997-2002)									
Body	Airbag	2000	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	2001	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Infotainment System	Trip Info Display TID	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Combo (2002-2002)									
Engine	Z16SE	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Y17DT	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Body	Airbag	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Body Control Module	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Chassis	ABS-5.3/5.4 (+TC)	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Electronic Power Steering	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			

Infotainment System	Radio CCR 2006	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CDR 2005	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Trip Info Display TID	2002	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Frontera (1999 - 2003)									
Body	Anti Theft Warning	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Central Door Lock	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Immobiliser	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Chassis	ABS 415	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Infotainment System	Multi Info Display MID	1998	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 500	1998	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Frontera-B (1999-2003)									
Engine	X20DTH	1999	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Y22DTH	2001	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Transmission	AR 25/35	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	Airbag	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Anti Theft Warning	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Central Door Lock	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Immobiliser	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Multi Info Display MID	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 300	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			

Infotainment System	Radio 400	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 500	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 700	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Trip Info Display TID	1999	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Meriva (2003-2010)									
Engine	Y13DT	2005	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z14XEP	2005	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z16LET	2006	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z16YNG	2006	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z16SE	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z16XE	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z16XE	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z17DT	2007	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z17DTR	2007	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Y17DT	2004	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control 2.Programming	
	Z17DTH	2004	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	
	Z18XE	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control 2.Programming	

Transmission	Easytronic(MTA)	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	Add On Heater	2006	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Airbag	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Body Control Module	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Electronic Climate Control	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	HeadLamp Levelling Device	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	EHS	2007	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Programming	
	Immobiliser	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Add On Heater	2004	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Instrument	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Add. Fun.	
Chassis	ABS5.3/5.4 (+TC)	2003	2004	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	ABS8/ESP8	2005	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.Programming	
	Electronic Power steering	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun.	
	ESP	2003	2004	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Infotainment System	Radio CAR 2003	2003	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CCR 2006	2003	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CDR 2005	2003	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			

	Trip Info Display TID	2003	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Monterey (1997-1999)									
Body	Airbag	1999	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Anti Theft Warning	1998	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.ECU Control	
	Body Control Module	1998	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Engine	ENG_4JX1	1999	1999		<i>err. Code</i>	<i>data</i>			
	ENG_6VE1	1999	1999		<i>err. Code</i>				
Movano (1999-2010)									
Body	Airbag	2001	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Park Assist	2008	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
	Body Control Module	2005	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	1999	2004	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Add. Fun. 2.ECU Control	
Transmission	MTA	2007	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Chassis	ABS/ESP	2004	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Pneumatic Suspension	2007	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Sintra (1997-1999)									
Engine	X22DTH	1998	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Transmission	AF 13II/20/22/30	1997	1998	<i>info</i>	<i>err. Code</i>	<i>data</i>			

Body	Airbag	1999	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Body Control Module	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Infotainment System	Multi Info Display MID	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 300	1998	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 400	1998	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio 500	1998	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CAR 300	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CAR 400	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CDR 500	1997	1997	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Trip Info Display TID	1999	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Speedster/VX220 (2001-2007)									
Engine	Z20LET	2003	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Z22SE	2001	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Body	Airbag	2001	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Anti Theft Warning	2001	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	2001	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Programming	
Chassis	ABS 430	2001	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Vivaro (2001-2012)									
Engine	F9Q 760_762 (1.9L)	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Transmission	MTA	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Add On Heater	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Reset Overheat 2.Reset Start Counter	

Body	Park Assist	2007	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>		1.Program Variant Configuration 2.Program Vehicle Identification No. 3.Program Buzzer	
	Airbag	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Body Control Module	2001	2012	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Chassis	ABS	2001	2002	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	ABS/ESP	2003	2010	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
Infotainment System	Multi Info Display MID	2001	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CCR 2006	2001	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CDR 2005	2001	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Trip Info Display TID	2001	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Corsa-B(GMSA) (1997-2005)									
Engine	13NE	1997	2000	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	14NE	1997	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	16NE	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	16SE	1997	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	Immobiliser	1997	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Corsa-C (GMSA) (2002-2007)									

Engine	C14SE	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	C16SE	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	C18XE	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	Y17DT	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Y17DTL	2003	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Z14XE	2005	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Body	Airbag	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Body Control Module	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Instrument	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	
	Power Window Lifter Front	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Power Window Lifter Rear	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Chassis	ABS-5.3/5.4 (+TC)	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Electronic Power Steering	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Infotainment System	Radio CCRT 2008	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Radio CDR 2005	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Trip Info Display TID	2002	2007	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Astra-G(GMSA) (1997-2005)									
Engine	13NE	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	14NE	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	16SE	1997	1999	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	20SEL	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	
	C16SEL	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	X18XE1	2000	2001	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Add. Fun. 2.ECU Control	
	X18XEL	2002	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>			

	Z16XE	2000	2003	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	
	Z18XE	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	
	Z 17 DTL	2002	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Z22SE	2001	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.ECU Control	
Body	Airbag	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Anti Theft Warning	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Central Door Lock	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>		
	Engine Cooling Module	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Immobiliser	1997	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Instrument	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Chassis	ABS-5.3/5.4 (+TC)	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
	Electronic Power Steering	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			
Infotainment System	Trip Info Display TID	2000	2005	<i>info</i>	<i>err. Code</i>	<i>data</i>			