

Daewoo V26.60								
System	Sub System	Sub System	System Info.	Read-clear Dtc.	Data Stream	Actuat.	Syste m ID	Special Functions
DAEWOO LEMANS(RACER)								
ENGINE SOHC	1.5 MPI			err. Code	data	Actuat.		
ENGINE DOHC	1.5 MPI			err. Code	data	Actuat.		
DAEWOO ESPERO								
ENGINE SOHC	1.5 MPI(BEFORE 93MY)			err. Code	data	Actuat.		
	1.5 MPI(AFTER 93MY)			err. Code	data	Actuat.		
	1.8 MPI			err. Code	data	Actuat.		
	2.0 MPI			err. Code	data	Actuat.		
	2.0 TBI			err. Code	data	Actuat.		
ENGINE DOHC	1.5 MPI(BEFORE 93MY)			err. Code	data	Actuat.		
	1.5 MPI(AFTER 93MY)			err. Code	data	Actuat.		
	1.5 MPFI(BEFORE 93MY)			err. Code	data	Actuat.		
	1.5 MPFI(AFTER 93MY)			err. Code	data	Actuat.		
ATUTOMATIC TRANSAXLE				err. Code	data			
ANTFLOCK BRAKE SYSTEM				err. Code	data			
SRS-AIRBAG				err. Code				
DAEWOO PRINCE								
ENGINE SOHC	1.8 MPFI			err. Code	data	Actuat.		
	2.0 MPFI			err. Code	data	Actuat.		
	LPG			err. Code				
	2.0 (rus)							
	2.2L MPFI			err. Code	data	Actuat.		
ANTFLOCK BRAKE SYSTEM				err. Code	data		v	
DAEWOO SUPER SALON								
ENGINE SOHC	1.8 MPI			err. Code	data	Actuat.		
	2.0 MPI			err. Code	data	Actuat.		
ANTFLOCK BRAKE SYSTEM				err. Code	data		v	
DAEWOO CIELO								
ENGINE SOHC	UNLEAD 1.5L			err. Code	data	Actuat.		
	UNLEAD 1.8L			err. Code	data			
ENGINE DOHC	UNLEAD 1.5L			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE				err. Code	data			
ANTFLOCK BRAKE SYSTEM				err. Code	data			
SRS-AIRBAG								
DAEWOO NEXIA								

ENGINE SOHC	UNLEAD 1.5L			err. Code	data	Actuat.		
	UNLEAD 1.8L			err. Code	data			
	LEAD 1.5			err. Code	data	Actuat.		
	1.5(rus)			err. Code	data	Actuat.		
ENGINE DOHC	UNLEAD 1.5L			err. Code	data	Actuat.		
	LEAD 1.5L			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE				err. Code	data			
ANTI-LOCK BRAKE SYSTEM				err. Code	data			
SRS-AIRBAG				err. Code				
DAEWOO NEW-NEXIA								
01. ENGINE CONTROL	01.1.5 SOHC			err. Code	data	Actuat.		1.CRANK ANGLE TEC LEARN 2.EVAP.LEAK 3.ECU
	02.1.6 SOHC			err. Code	data	Actuat.		1.EVAP.LEAK 2.ADAPTION RESET
02. AUTOMATIC TRANSAXLE				err. Code	data			
03. ANTI-LOCK BRAKE SYSTEM				err. Code	data			
DAEWOO NEW-PRINCE								
ENGINE SOHC				err. Code	data	Actuat.		
ENGINE DOHC				err. Code	data	Actuat.		
ANTI-LOCK BRAKE SYSTEM				err. Code	data		✓	
DAEWOO NEW-BROUGHAM								
ENGINE SOHC				err. Code	data	Actuat.		
ENGINE DOHC				err. Code	data	Actuat.		
ANTI-LOCK BRAKE SYSTEM				err. Code	data		✓	
DAEWOO LANOS								
ENGINE SOHC	1.3L			err. Code	data	Actuat.		
	1.5L			err. Code	data	Actuat.		
ENGINE DOHC	1.5L			err. Code	data	Actuat.		
	1.6L			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE				err. Code	data			
ANTI-LOCK BRAKE SYSTEM	01.DELPHI			err. Code	data	Actuat.		

	02.BOSCH			err. Code	data	Actuat.		
SRS-AIRBAG				err. Code				
DAEWOO NEW-LANOS								
01. ENGINE CONTROL	01.1.5 SOHC			err. Code	data	Actuat.		1.CRANK ANGLE TEC LEARN 2.EVAP.LEAK 3.ECU
02. AUTOMATIC TRANSAXLE				err. Code	data			
03. ANTI-LOCK BRAKE SYSTEM				err. Code	data			
DAEWOO NUBIRA								
ENGINE SOHC	1.5L			err. Code	data	Actuat.		
ENGINE DOHC	1.5L			err. Code	data	Actuat.		
	1.8L			err. Code	data	Actuat.		
	2.0L			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE				err. Code	data			
ANTI-LOCK BRAKE SYSTEM				err. Code	data			
SRS-AIRBAG				err. Code	data			
DAEWOO LEGANZA								
ENGINE SOHC	1.8L			err. Code	data	Actuat.		
	LPG			err. Code				
	2.0L			err. Code	data	Actuat.		
ENGINE DOHC	1.8L			err. Code	data	Actuat.		
	2.0L			err. Code	data	Actuat.		
	2.2L			err. Code	data	Actuat.		
	LPG			err. Code				
AUTOMATIC TRANSAXLE	LPG			err. Code	data			
ANTI-LOCK BRAKE SYSTEM				err. Code	data	Actuat.	√	Air Bleed
SRS-AIRBAG				err. Code	data			
DAEWOO MATIZ / SPARK								
ENGINE CONTORL	01.0.8L			err. Code	data	Actuat.		ADAPTION RESET
	02.1.0L			err. Code	data	Actuat.		ADAPTION RESET
	03.LEAD			err. Code	data			

ANTI-LOCK BRAKE SYSTEM				err. Code	data	Actuat.		
SRS-AIRBAG				err. Code				
DAEWOO NUBIRI II								
ENGINE SOHC	2.0 L			err. Code	data	Actuat.		
ENGINE DOHC	1.5 L			err. Code	data			
	1.6 L			err. Code	data			
	2.0 L			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE				err. Code	data			
ANTI-LOCK BRAKE SYSTEM				err. Code	data	Actuat.		
SRS-AIRBAG				err. Code	data			
DAEWOO MAGNUS								
ENGINE CONTROL	GASOLINE(L4)			err. Code	data	Actuat.		
	XK(SIEMENS L6)			err. Code	data			
	LPG			err. Code				
AUTOMATIC TRANSAXLE	GASOLINE(~2002MY)			err. Code	data	Actuat.		
	GASOLINE(2002MY~)			err. Code	data	Actuat.		
	LPG			err. Code	data	Actuat.		
ANTI-LOCK BRAKE SYSTEM				err. Code	data	Actuat.		
SRS-AIRBAG				err. Code				
ISC				err. Code	data	Actuat.		
DAEWOO REZZO / TACUMA								
ENGINE CONTROL	UNLEADED			err. Code	data	Actuat.		
	LPG	NIKKI LPG ENGINE		err. Code	data			
		LPG		err. Code				
	GASOLINE BEFORE 2005	01.SOHC		err. Code	data	Actuat.		
		02.1.6 DOHC		err. Code	data	Actuat.		
		03.1.8DOHC		err. Code	data	Actuat.		
	GASOLINE AFTER 2005	01.SOHC		err. Code	data	Actuat.		
		02.1.6 DOHC		err. Code	data	Actuat.		
		03.1.8DOHC		err. Code	data	Actuat.		
		04.2.0 DOHC		err. Code	data	Actuat.		
	GASOLINE			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE	LPG			err. Code	data	Actuat.		
	4HP16			err. Code	data	Actuat.		

	SAISIN			err. Code	data	Actuat.		
ANTI-LOCK BRAKE SYSTEM				err. Code	data	Actuat.		
SRS-AIRBAG				err. Code	data			
DAEWOO KALOS / AVEO (-05 MY)								
ENGINE CONTROL	SOHC			err. Code	data	Actuat.		
	1.2 SOHC (SIEMENS)			err. Code	data	Actuat.		
	1.5 SOHC (DELPHI)			err. Code	data	Actuat.		
	1.6 SOHC (DELPHI)			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE				err. Code	data	Actuat.		
ANTI-LOCK BRAKE SYSTEM				err. Code	data	Actuat.		
SRS-AIRBAG				err. Code				
DAEWOO DAMAS / RABO								
ENGINE CONTROL				err. Code	data	Actuat.		
DAEWOO LACETTI / OPTRA / EXCELLE (-05)								
ENGINE CONTROL	1.5L			err. Code	data			
	1.6L			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE				err. Code	data	Actuat.		
ANTI-LOCK BRAKE SYSTEM				err. Code	data	Actuat.		
SRS-AIRBAG				err. Code				
DAEWOO KALOS/AVEO(06~)								
ENGINE CONTROL	1.2 SOHC(SIEMENS)			err. Code	data	Actuat.		
	1.5 SOHC(DELPHI)		Info	err. Code	data	Actuat.		
	1.6 DOHC(DELPHI)		Info	err. Code	data	Actuat.		
	1.8 DOHC (DELPHI)			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE			Info	err. Code	data	Actuat.		
ANTI-LOCK BRAKE SYSTEM				err. Code	data	Actuat.		
SRS-AIRBAG				err. Code				
DAEWOO LACETTI/OPTRA/ EXCELLE(06~)								
ENGINE CONTROL	1.5 DOHC (SIEMENS)			err. Code	data	Actuat.		ADAPTION RESET
	1.6 DOHC (SIEMENS)			err. Code	data			ADAPTION RESET
	2.0L DIESEL			err. Code				
	1.8 DOHC (SIEMENS)			err. Code				

	1.8 DOHC (DELPHI)			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE	AISIN TCU (GASOLINE)		Info	err. Code	data	Actuat.		
	AISIN TCU (DIESEL)			err. Code	data			LEARNING DATA RESET
	AISIN 4GEAR(GAS 1.8L)			err. Code				
ANTI-LOCK BRAKE SYSTEM			Info	err. Code	data	Actuat.		
SRS-AIRBAG				err. Code				
DAEWOO MATIZ(M200)								
ENGINE CONTROL	0.8 SOHC			err. Code	data			
	0.8 SOHC KOBD(2007MY)			err. Code	data			
	1.0 SOHC(EUROII)			err. Code	data			ADAPTION RESET
	1.0 SOHC(EUROIII&IV)			err. Code	data			ADAPTION RESET
AUTOMATIC TRANSAXLE				err. Code	data	Actuat.		
ANTI-LOCK BRAKE SYSTEM				err. Code	data			
SRS-AIRBAG				err. Code				
DAEWOO MATIZ(M300)/SPARK								
01.POWER TRAIN	01.ENG.CONTROL MOD.(ECU-D52)			err. Code	data	Actuat.		1.ADAPTION RESET 2.EVAP.LEAK
	02.LPG CONTROL MOD.(ICM-LPGI)			err. Code	data			
	03.A/T CONTROL MODULE			err. Code	data			
02.CHASSIS	01.BRAKE CONTROL MODULE(EBCM)			err. Code	data			1.SAS SENSOR ZERO SETTING 2.WRITE VIN
03.BODY	01.AIRBAG CONTROL MODULE(SDM)			err. Code	data			1.NEW SDM APPLIED SETUP 2.SDM RESET 3.WRITE VIN
	02.INS.CLUSTER CTRL MOD(IPC)			err. Code	data			
DAEWOO TOSCA/EPICA								
ENGINE CONTROL	GASOLINE 1.8L			err. Code	data			LEARNING DATA RESET

	GASOLINE 2.0L/2.5L			err. Code	data			LEARNING DATA RESET
	LPI(EMS ECU)			err. Code	data	Actuat.		
	LPI(IFB ECU)			err. Code	data	Actuat.		
	LPG 2.0L(MAIN)			err. Code	data			LEARNING DATA RESET
	LPG 2.0L(INTERFACE)			err. Code	data			
	2.0L DIESEL			err. Code	data			LEARNING DATA RESET
	LPG 2.0L(MAIN)-KULEV			err. Code	data			
	LPG 2.0L(MAIN)-6 AT			err. Code	data			
AUTOMATIC TRANSAXLE	AISIN 4 GEAR(GAS 1.8L)			err. Code	data			
	AISIN 4 GEAR(LPG 2.0L)			err. Code	data			
	AISIN 5GEAR(GAS			err. Code	data			
	AISIN TCU(DIESEL)			err. Code	data			
ANT-LOCK BRAKE SYSTEM				err. Code	data			
SRS-AIRBAG			Info	err. Code	data			
ISU				err. Code	data			
DAEWOO LACETTI PREMIERE/CRUZE								
01. ENGINE CONTROL	01.ECM-GEN3 1.6D&1.8D			err. Code		Actuat.		
	02.ECM-DIESEL			err. Code	data	Actuat.		
	03.ECM-FAM 1			err. Code				
02. AUTOMATIC TRANSAXLE	01.TCM-GF6			err. Code		Actuat.		
03.CHASSIS	01.ABS			err. Code				
DAEWOO GENTRA								
ENGINE CONTROL	1.2 SOHC (SIEMENS)			err. Code	data			ADAPTION RESET
	1.6 DOHC (DELPHI)			err. Code	data			
	1.5 SOHC		Info	err. Code	data	Actuat.		
	1.2 DOHC (SIEMENS)			err. Code	data	Actuat.		
	1.5 SOHC (DELPHI)			err. Code	data	Actuat.		
	1.4/1.6 DOHC (DELPHI)			err. Code	data	Actuat.		
AUTOMATIC TRANSAXLE				err. Code				
ANT-LOCK BRAKE SYSTEM				err. Code	data	Actuat.		
SRS-AIRBAG			Info	err. Code	data			

DAEWOO STATEMAN								
ENGINE CONTROL	V6			err. Code	data	Actuat.		
	V6 OBD			err. Code	data			
AUTOMATIC TRANSAXLE				err. Code	data	Actuat.		
ANT-LOCK BRAKE SYSTEM	ABS			err. Code	data	Actuat.		
	ABS/ETC(DISABLE)			err. Code	data			
SRS-AIRBAG				err. Code	data			
BODY CONTROL SYSTEM	INSTRUMENT			err. Code	data			
	TRIP COMPUTER			err. Code	data			
	INSTRUMENT- CONFIG			err. Code	data			
DAEWOO WINSTORM / CAPTIVA / ANTABA								
ENGINE CONTROL	01.ECM(DIESEL)			err. Code	data			LEARNING DATA RESET
	02.2.4 DOHC(GASOLINE)			err. Code		Actuat.		
	03.3.2 DOHC(GASOLINE)			err. Code		Actuat.		
AUTOMATIC TRANSAXLE	TCM(AISIN CAN)			err. Code	data			LEARNING DATA RESET
CHASSIS	01.ABS			err. Code		Actuat.		SAS SEN SOR ZERO SETTING
	02.TCCM			err. Code	data	Actuat.		
BODY	BCM			err. Code	data	Actuat.		
DAEWOO CRUZE								
01.ENGINE CONTROL	01.1.6L GASOLINE(LXT)			err. Code		Actuat.		
	02.1.6L GASOLINE(LXV)			err. Code		Actuat.		
	03.1.8L GASOLINE(2H0)			err. Code		Actuat.		
	04.2.0L DIESEL(LLW)			err. Code		Actuat.		
02.AUTOMATIC TRANSAXLE	01.1.6L(LXT)			err. Code		Actuat.		
	02.1.6L(LXV)			err. Code		Actuat.		
	03.1.8L(2H0)			err. Code		Actuat.		
	04.2.0L(LLW)			err. Code		Actuat.		
03.CHASSIS CONTROL SYSTEM	01.ABS	STABILITY SYSTEM(EQUIP)		err. Code		Actuat.		
		STABILITY SYSTEM(NOTEQUIP)		err. Code		Actuat.		